

Autoclave test report

CE MultiSurface Cleaner™

vileda[®]
PROFESSIONAL

PRODUCT

CE MultiSurface Cleaner™ (TSU 162236)



TEST CONDITIONS

Autoclave

Varioklav 135 S, steam sterilizer, single pre-vacuum, usable volume 135 litres

Test Parameter

134°C for 5 minutes

Pre-vacuum: 20 kPa

Cooling-down of product between autoclaving cycles

RESULT

After 10 autoclaving cycles the CE MultiSurface Cleaner™ shows no damages and fulfills FHCS specification requirements.

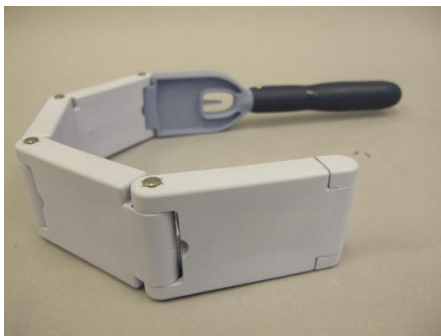


Photo 1: CE MultiSurface Cleaner™ after 10 autoclaving cycles

ADDITIONAL COMMENTS

- This test was done in the laboratory of FHCS GmbH, Regional Technical Centre.
- The product was not used for cleaning between autoclaving cycles.
- Different conditions at the customer can lead to a different result.

Date: 2018/11/22